
How to light gas fireplace pilot (if pilot flame is off):

NOTE: the instruction card is placed under the fireplace on the left after the screen is removed.

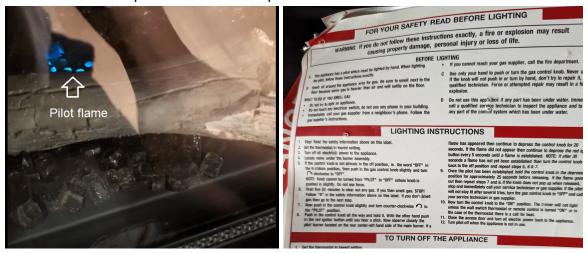

You can follow this instruction video: https://youtu.be/Cvl_fAFRIW8

(follow the steps in this video until minute 2:20 ONLY until pilot is established and then use the <u>remote on the wall</u> to turn on the flame after the pilot is on)

Or the instructions below:

(1) Please take off the SCREEN COVER (only the front screen cover) to have access to the control knob. IMPORTANT: if you smell gas, please do not attempt the steps below and turn the control knob to OFF



- (2) PUSH and TURN the control knob counterclockwise to PILOT
- (3) PUSH the control knob and hold it. Use the other hand to press the RED IGNITOR 3-5 times until the pilot is on. Then keep holding the control knob for approximately 25-30 seconds (there should be multiple beeps to confirm that the pilot is established). If the pilot doesn't come up, turn the control knob to OFF and wait another 5-10 minutes before trying Step 2 again.
- (4) Once the pilot lits up, turn the control knob to ON and put back the screen cover. Then please use the remote on the wall to turn the fireplace on